



SECTION

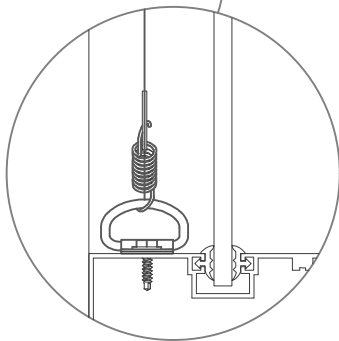

NO SCALE

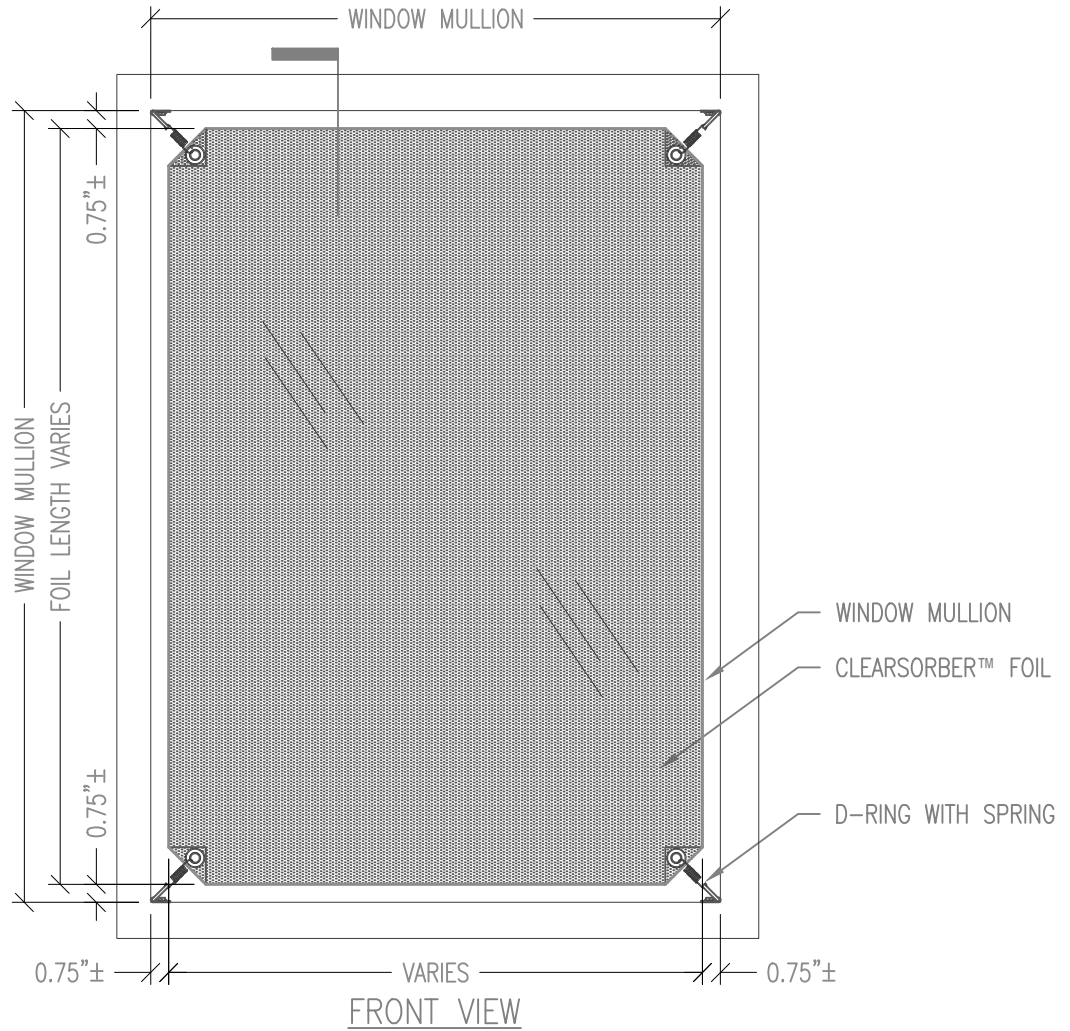

CLEARSORBER™ FOIL (SINGLE LAYER)  
 DIRECT MOUNT TO WINDOW MULLION  
 D-RING/SPRING/GROMMET

INSTALLATION

1. SECURE D-RINGS DIRECTLY TO WINDOW MULLION WITH SELF TAPPING SCREWS.
2. ATTACH SPRINGS TO TOP CORNERS OF FOIL AND D-RINGS.
3. INSERT SPRINGS INTO BOTTOM GROMMETS.
4. PULL FOIL TAUGHT AND HOOK FREE END OF SPRING ONTO D-RING.

NOTE:  
 WINDOW MULLIONS ARE SHOWN ILLUSTRATIVELY. ACTUAL MULLION DEPTH WILL VARY BASED ON APPLICATION.  
 ALL HARDWARE PROVIDED UNLESS OTHERWISE NOTED.



99 SOUTH STREET, PASSAIC, NJ 07055  
 (p) 973-916-1166 (e) estimating@rpgacoustic.com

Title: CLEARSORBER FOIL-SINGLE  
 DIRECT MOUNT OPT. 1

Proj: RPG PRODUCT

Date: 6/18/20

By: ZAH

Scale: 1-1/2" = 1'-0"

Comments:

---



---



---



---



---

Path: F:\Project Mgmt - RPG\PROJECTS\ALL PRODUCTS DRAWING\CLEARSORBER Foil\AutoCAD Drawings\Mounting\Window Mounting - Direct Mount Options