



SECTION

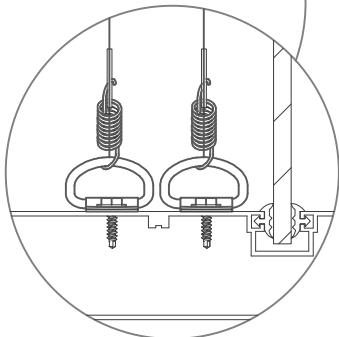

NO SCALE

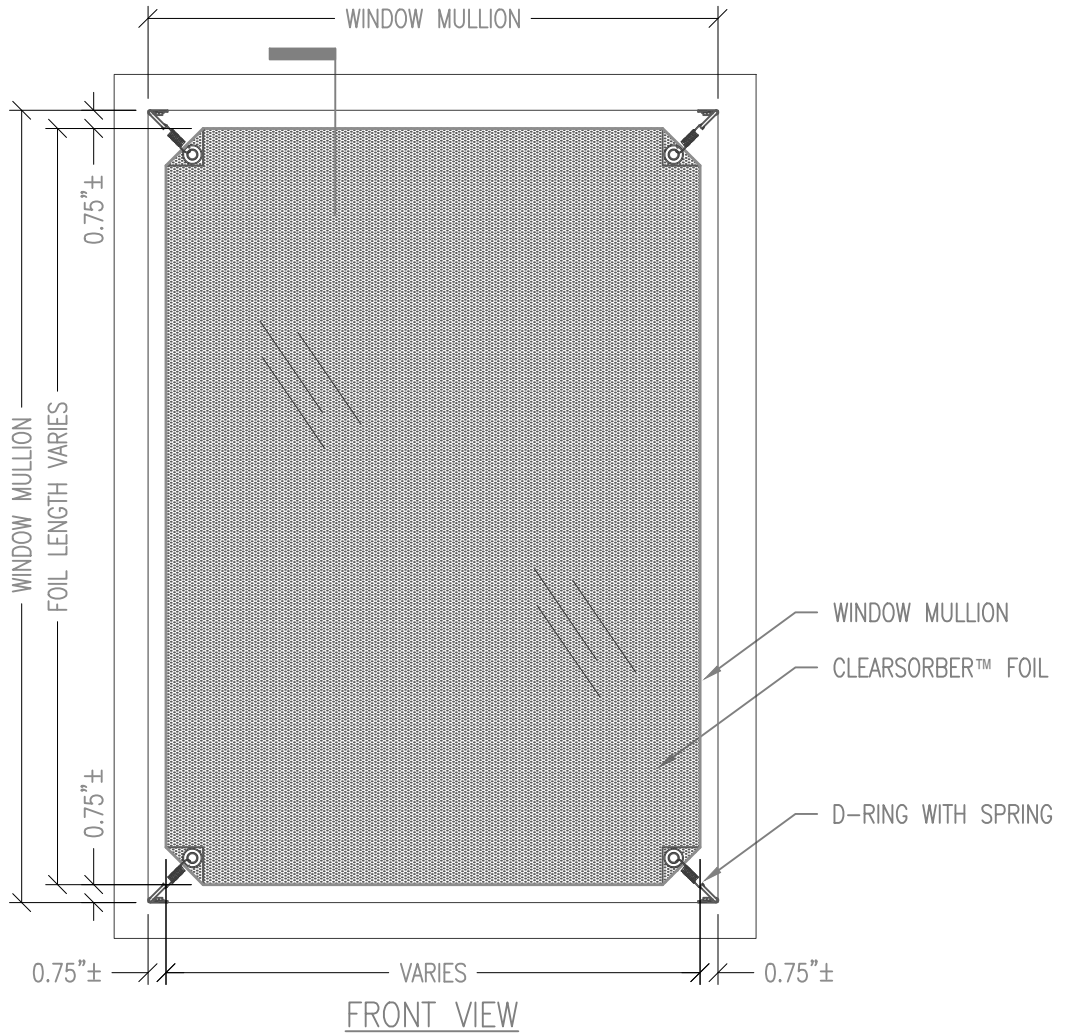

CLEARSORBER™ FOIL (DUAL LAYER)
DIRECT MOUNT TO WINDOW MULLION
D-RING/SPRING/GROMMET

INSTALLATION

1. SECURE D-RINGS DIRECTLY TO WINDOW MULLION WITH SELF TAPPING SCREWS.
2. ATTACH SPRINGS TO TOP CORNERS OF FOIL AND D-RINGS.
3. INSERT SPRINGS INTO BOTTOM GROMMETS.
4. PULL FOIL TAUGHT AND HOOK FREE END OF SPRING ONTO D-RING.

NOTE:
WINDOW MULLIONS ARE SHOWN ILLUSTRATIVELY. ACTUAL MULLION DEPTH WILL VARY BASED ON APPLICATION.
ALL HARDWARE PROVIDED UNLESS OTHERWISE NOTED.



99 SOUTH STREET, PASSAIC, NJ 07055
(p) 973-916-1166 (e) estimating@rpgacoustic.com

Title: CLEARSORBER FOIL-DUAL
DIRECT MOUNT OPT. 1

Proj: RPG PRODUCT

Date: 6/18/20 By: ZAH Scale: 1-1/2" = 1'-0"

Path: F:\Project Mgmt - RPG\PROJECTS\RPG PRODUCTS DRAWING\CLEARSORBER Foil\1-AutoCAD Drawings\Mounting\Window Mounting - Direct Mount Options

Comments:
